

PROTECTGLOBAL.COM


INSTRUCTIONS FOR CHANGING THE NOZZLE



SECURED IN SECONDS



Contains: Nozzle and ceramic paste.

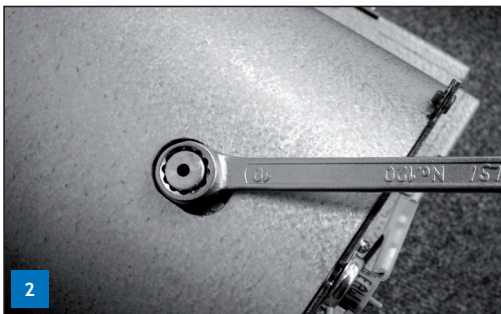


Remove the standard nozzle by use of a 10 mm spanner.



3

Apply a small amount of the ceramic paste on the thread.

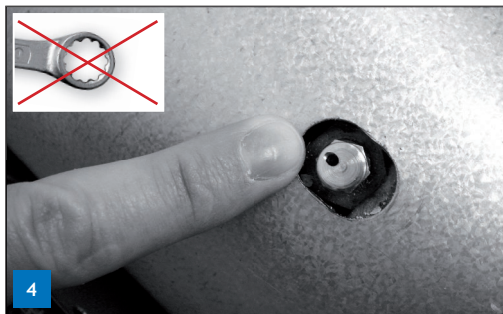

4

Screw the nozzle all the way in. Only use your fingers and don't over-tighten the nozzle. Leave it pointing in the required direction.



Finally place the metal cover back in position.



Scan the code to watch how to change a nozzle.

INFO

Visit PROTECTGLOBAL.COM to find information about the distributor in your country.

PROTECT A/S

Hasselager Centervej 5 · DK-8260 Viby J · Tel.: (+45) 86 72 18 81
info@protectglobal.com · protectglobal.com